

**PORODO**



**Porodo**  
**Porodo 7 In 1 Baby**  
**Food Processor**

SKU: PD-LFST018

# Table of Contents

Features	2
Overview	2
Safety Precautions	3
Schematic View	4
Touch Control Panel	4
Transparent Water Window	5
Instructions for Use	5
A. Installing the Blender Jar	5
B. Installing and Removing the Blade	6
Anti-Dry Protection	6
Function Description	6
A. Steaming Function	6
A.1 Suggested Steaming Time Table	8
A.2 Extended Steaming	9
B. Blending Function	9
B.1 Suggested Blending Time Table	10
B.2 Attention	10
C. Sterilizer Function	11
D. Warmer	12
D.1 Suggested Warming Time Table	13
E. Keep Warm Function	14
Descaling the Water Tank	14
Power Cord Storage	14
Cleaning and Maintenance	15
Steam Outlet Cleaning	16
Specifications	16
Warranty	17
Contact Us	17

## Features

1. The control panel is designed for simplicity, making it easy for parents to operate the machine efficiently.
2. This processor is crafted for hassle-free cleaning, ensuring time saved after meal preparation.
3. Constructed with BPA-free materials to ensure safe contact with food, providing peace of mind.
4. Utilizes only the finest materials that are durable and odor-free, ensuring longevity and safety.
5. A versatile device capable of steaming, chopping, and warming, perfectly suited for preparing various baby meals.
6. Grows with your child from infancy to toddlerhood, making it a smart, long-term investment in your child's nutrition.
7. Efficiently steams fruits and vegetables, preserving nutrients and flavors essential for your baby's development.
8. Smoothly blends ingredients into purees suitable for infants, making meal prep quicker and easier.
9. Quickly chops solid food into smaller pieces suitable for older babies, helping transition to solid foods.
10. Gently warms baby bottles and food to the perfect temperature, making mealtime more comfortable for your baby.
11. Sterilizes bottles and accessories to maintain hygiene, ensuring your baby's health is protected.

## Overview


Thank you for purchasing Porodo 7 In 1 Bay Food Processor, featuring a steamer, blender/chopper, warmer, and sterilizer. This versatile device is ideal for sterilizing baby bottles, accessories, and making baby food. Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

## Safety Precautions

- 1.** Always exercise caution when using electrical appliances, especially in the presence of children.
- 2.** Be cautious when adding hot liquids to the food processor or blender, as they may cause sudden steaming and potentially eject out of the appliance.
- 3.** Always unplug the appliance from the power supply when left unattended or before assembling, disassembling, or cleaning.
- 4.** Ensure children are supervised around the appliance to prevent them from playing with it. Always keep the appliance and its cord out of children's reach.
- 5.** This appliance is not suitable for use by individuals, including children, who have impaired physical, sensory, or mental capabilities, or lack experience and knowledge, unless they are under the supervision of a responsible adult.
- 6.** If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to avoid any risk.
- 7.** This appliance is designed for use in:
  - 7.1** Staff kitchen areas in shops, offices, and other workplaces
  - 7.2** Farmhouses
  - 7.3** Hotels, motels, and other residential settings
  - 7.4** Bed and breakfast environments
- 8.** Never use the appliance if the plug, cord, or the appliance itself is damaged.
- 9.** Handle the blades with care, especially when emptying or cleaning the bowl, as they are very sharp.
- 10.** If the blades become blocked, unplug the appliance before attempting to remove any ingredients causing the blockage.
- 11.** The appliance can become very hot during steam cooking, which could lead to burns. Always use the handle when lifting the bowl.
- 12.** Be cautious of the hot steam that rises from the bowl and water reservoir when you remove the lid.
- 13.** Never leave the appliance unattended while it is in use.


## Schematic View

- A.** Decorative Water Tank Lid
- B.** Water Tank Cap
- C.** Housing and Digital Control Panel
- D.** Jar Lid
- E.** Heat Insulation Cover
- F.** Measuring Cup
- G.** Splash Lid
- H.** Steaming Basket
- I.** Strainer
- J.** Blender Jug
- K.** Blade
- L.** Blade Set Seal Ring
- M.** Blade Base
- N.** Spatula
- O.** Clamp

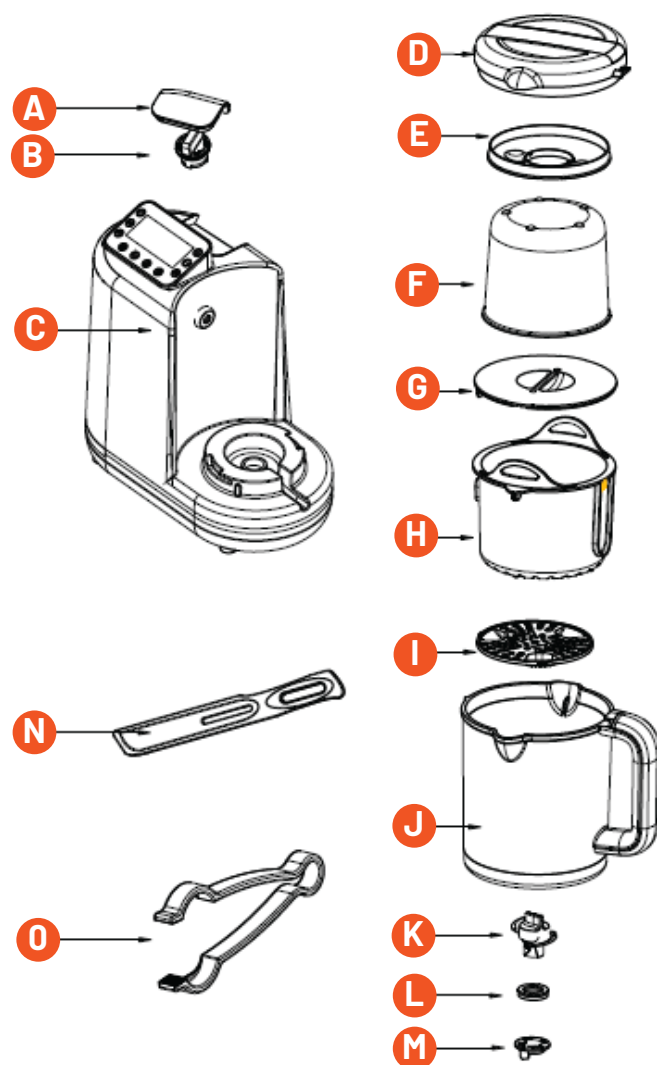

## Touch Control Panel

- 1.** ON/OFF
- 2.** Start/Pause
- 3.** Steaming Function
- 4.** Blending Function
- 5.** Warmer Function
- 6.** Sterilizer Function
- 7.** Keep Warm
- 8.** Descaling
- 9.** Increase Time
- 10.** Decrease Time
- V. Water Empty Sign:** Indicates when there is no water in the tank

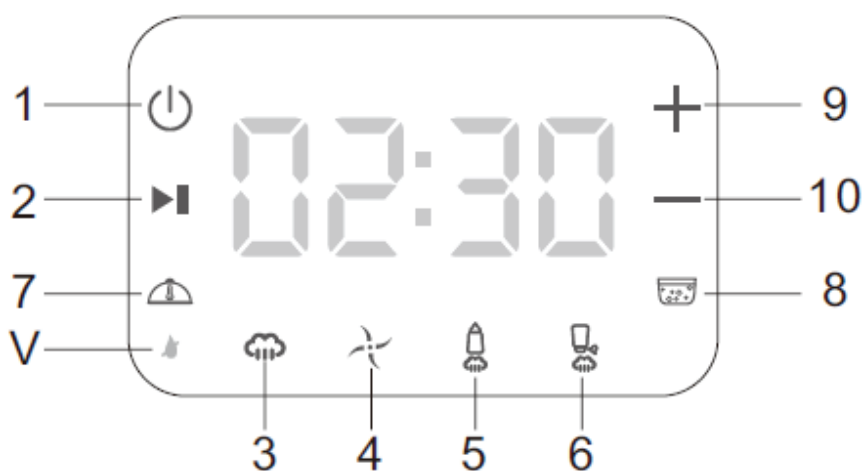

## Transparent Water Window

The water tank on the left side features transparent windows that allow you to view the water volume (in milliliters) and time (in minutes). These are displayed on the left and right sides of the water window, respectively. When the appliance is plugged in, the light inside the water tank will illuminate.




## Instructions for Use

1. Before using for the first time, we recommend cleaning the jug, blade set, cooking baskets, lids, strainer, spatula, and clamp. These items can be washed with a sponge in soapy water or placed in the dishwasher.
2. Remove the Water Tank Lid (A): Gently pull it up as demonstrated in the figure.
3. Open the Water Tank: Turn the cap (B) counterclockwise.
4. Use the Measuring Cup (F) to add the required amount of water.
5. Turn the cap (B) clockwise to seal and close the tank.
6. Align the lid with the tank nozzle using the notch on the lid, then press down firmly to secure.




### A. Installing the Blender Jar

1. Ensure the blender jar is correctly positioned before use.
2. To attach the jug lid, position it on the blender jar and turn it counterclockwise.
3. Ensure that the hook of the lid is fully engaged in the slot on the housing.

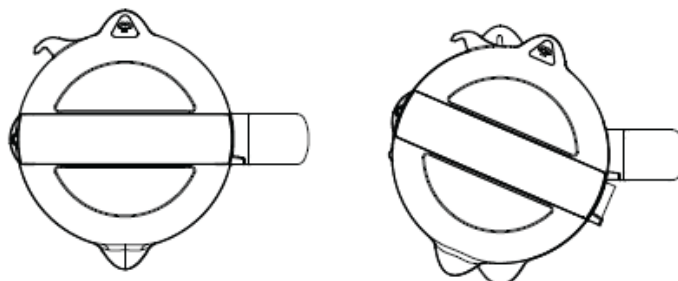

## B. Installing and Removing the Blade

1. Hold the blade (K) upside down, ensuring the seal (L) with the suction pad (flared part) faces upwards.
2. Press the seal (L) onto the blade spindle.
3. Invert the blender jar (J) and insert the blade's spindle into the hole inside the blender jar.
4. Securely hold the blade inside the blender jar while positioning the locking ring (M) onto the blade's spindle.
5. Rotate the locking ring (M) a quarter turn counterclockwise to lock the blade into place.
6. Ensure it is properly secured by pulling on the locking ring.

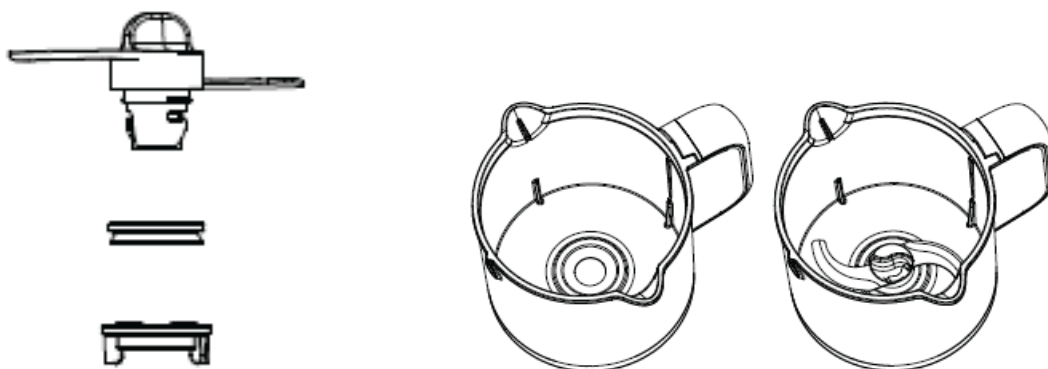

## Anti-Dry Protection

1. When the water tank becomes empty during steaming, warming, sterilizing, or keeping food warm, the tank empty indicator on the control panel will flash and a long buzzer will sound.
2. The time display and add-water indicator will activate for 10 minutes.
3. Once you refill the water tank and the add-water indicator turns off and the buzzer stops, the appliance is ready to be restarted.


## Function Description

### A. Steaming Function

1. Prepare the Water Tank: Fill the water tank.
2. Cut the food into pieces and place them into the steam basket (H).
3. If you wish to steam a single type of food, simply load it into the steam basket, place the basket inside the blender jar, and cover with the jug lid.






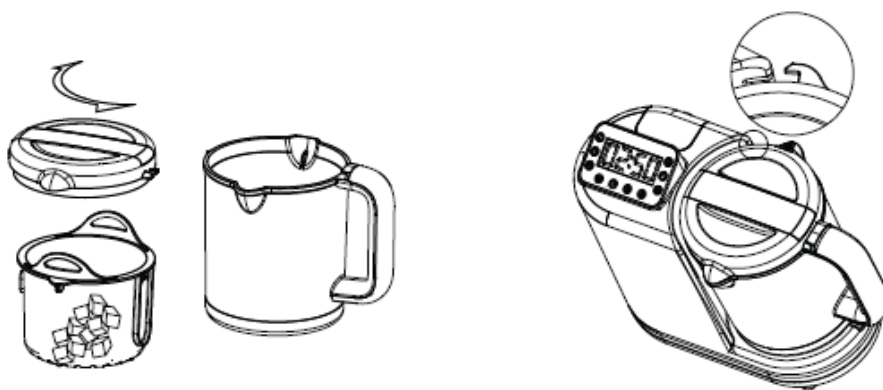


4. Turn the jug lid counterclockwise until it locks into the handle.
5. Ensure the buckle on the jug lid is securely fastened into the housing.

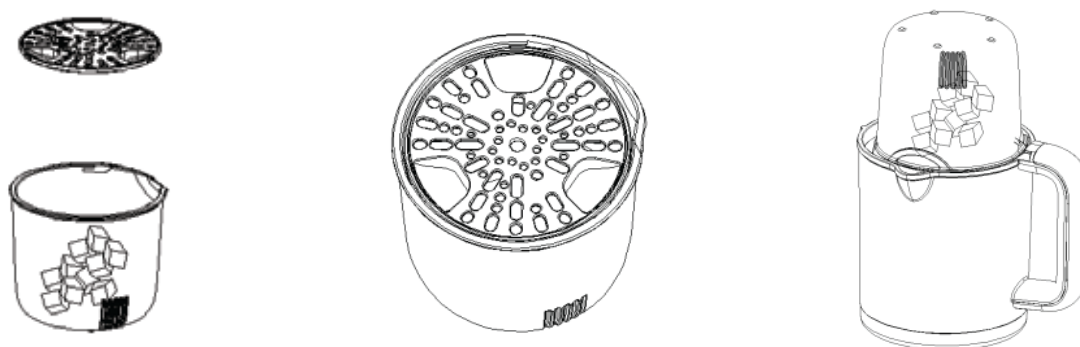

#### 6. Steaming Multiple Foods Simultaneously:

If you wish to steam two different foods at the same time, begin by placing one type of food into the steaming basket and insert the basket into the blender jug. Next, place the second type of food into the measuring cup and secure the strainer on top. Then position the measuring cup above the steaming basket.



7. Press the steam button. The default setting is 20 minutes, but you can adjust the time between 1 and 30 minutes by pressing the increase or decrease time buttons   .
8. Once the time is set, press the start button  to initiate the cooking process. To pause during cooking, press the start button  again.
9. Pressing the  once more will restart the machine.
10. When cooking is complete, the appliance will beep and the indicator lights will flash. All lights will turn off after 5 minutes if no further action is taken.
11. Carefully open the jar lid and use the spatula (N) to remove the steam basket. Allow the basket to cool down until no steam is released.
12. The food can now be eaten or further processed in the blender.



## A.1 Suggested Steaming Time Table

Food Type	Food	Cooking Time
Fruit	Apple	5 min.
	Orange	10 min.
	Peach	10 min.
	Pear	5 min.
	Pineapple	15 min.
	Plum	10 min.
Vegetable	Asparagus	10 min.
	Broccoli	20 min.
	Carrot	15 min.
	Cauliflower	15 min.
	Celery	15 min.
	Courgetti	15 min.
	Fennel	15 min.
	French beans	20 min.
	Leek	15 min.
	Onion	15 min.
	Peas	20 min.
	Pepper	15 min.
	Potato	20 min.
	Pumpkin	15 min.
	Spinach	15 min.
	Swede	15 min.
	Sweet potato	15 min.
	Tomato	15 min.
Meat	Chicken, beef, lamb, pork etc.	20 min.
Fish	Salmon, sole, cod, trout etc.	15 min.

## Notes:

1. All food should be cut into small cubes, no larger than 2-3 cm.
2. The amount of water needed to fill the tank varies based on the desired steaming duration. It may also be influenced by the room temperature, water hardness, and temperature.
3. A full tank is suitable for up to 30 minutes of steaming.

## A.2 Extended Steaming

The water level needed in the tank for steaming will vary based on room temperature and the hardness and temperature of the water used. The tank when fully filled is suitable for up to 30 minutes of steaming. For extended steaming durations:

1. If the water level runs low, pause the cooking process and wait for 5 minutes.
2. Safely open the water tank and refill it with sufficient water to complete your steaming.
3. Press Start/Pause button to continue steaming.
4. If the water tank is empty, the water empty indicator (V) on the display will be visible.

## B. Blending Function

1. Place the cooked or fresh food from the basket directly into the blender jar. (Refer to Figures 15-17)
2. Attach the splash lid (G) and close the jar lid (D) securely.
3. Place the bowl onto the base and lock it into place.
4. Plug in the appliance and switch it on (C).

**Note:** The default setting is 5 blending cycles. If you wish to pause the function, press the button again. Each cycle runs for 13 seconds on and 2 seconds off.



5. Add ingredients such as water, milk, sugar, or oil as needed.
6. Secure the jug lid by turning it counterclockwise.

**7.** Ensure the total volume of food and ingredients in the blender jug does not exceed 900 ml.

### **B.1 Suggested Blending Time Table**

Food Example	Maximum Quantity	Operating Time	Maximum Number of Cycles
Carrots and Water	540g Carrots and 360g Water	13s ON and 2s OFF	5 Cycles

### **B.2 Attention**

- 1.** When using the blending function, place the food into the blender jug, secure the splash cover, and then proceed to the next steps of blending.
- 2.** Do not operate the blender without any contents. Ensure there is food inside the blender jug before blending.
- 3.** Before starting the blending function, make sure the blender jug is properly fitted.
- 4.** The inlet hole on the side of the blender jug must align with the steam outlet on the food processor.
- 5.** Fit the jar lid on the blender jug and turn it counterclockwise, ensuring the hook of the lid is fully inserted into the housing.
- 6.** Press the blending function button (4), then press the start/pause button (2) to begin blending.
- 7.** When the setting is finished, press the start button to blend using the set mode.
- 8.** To pause the blending during operation, press the start button again.
- 9.** You can restart the machine after a pause by pressing the start button again.
- 10.** Once a cycle is complete, you can press the start button to extend the blending for an additional 12 seconds.
- 11.** When blending is complete, the appliance will beep and the lights will flash.
- 12.** All lights will turn off after 5 minutes if no further action is taken.
- 13.** Use the spatula to scrape food from the blender jar.
- 14.** Unplug the appliance
- 15.** Clean the blender jug







### C. Sterilizer Function



1. Fill the Water Tank: Add water to the water tank.
2. Prepare the Blender Jug: Place the blender jug onto the housing, rotate it into place, and then insert the steaming basket into the blender jug.
3. Insert the Bottle: Position the bottle upside down in the steaming basket, then cover it with the measuring cup.



4. Press the sterilizer button. The default setting is 8 minutes, but you can adjust the duration between 1 and 30 minutes by using the increase or decrease time buttons  and .
5. After each setting is complete, press the start button  to initiate the sterilization.
6. If you need to pause the sterilization, press the pause button . To resume, simply press the start button again.
7. Once sterilization is complete, the appliance will beep six times and the lights will flash. The device will automatically shut off after 5 minutes if no further action is taken.
8. Open the jug lid and carefully remove the bottle or other items using tongs or gloves to avoid burns from the steam.
9. Unplug the appliance.








## D. Warmer

1. Prepare the Water Tank: Fill the water tank with approximately 50ml of water.
2. Position the blender jug on the housing, rotate it to secure, and then insert the steaming basket into the blender jug.
3. Place the bottle into the steam basket and cover it with the measuring cup.



**Note:** You can warm baby milk, soup, juice, water, and other baby foods using this function.

4. Press the warm button. The default working time is set to 3 minutes. You can adjust the duration between 1 and 20 minutes using the increase or decrease time buttons  and .
5. To begin, press the start button. If you need to pause the appliance while it is operating, press the pause button . To resume operation, press the start button  again.
6. Once warming is complete, the appliance will beep six times, and lights will flash as an indicator. The device will automatically shut off after 5 minutes if no further action is taken.
7. Open the jug lid and carefully remove the bottle or other items using tongs or gloves to avoid burns from the steam.
8. Ensure the basket has cooled down before handling.
9. Unplug the appliance.

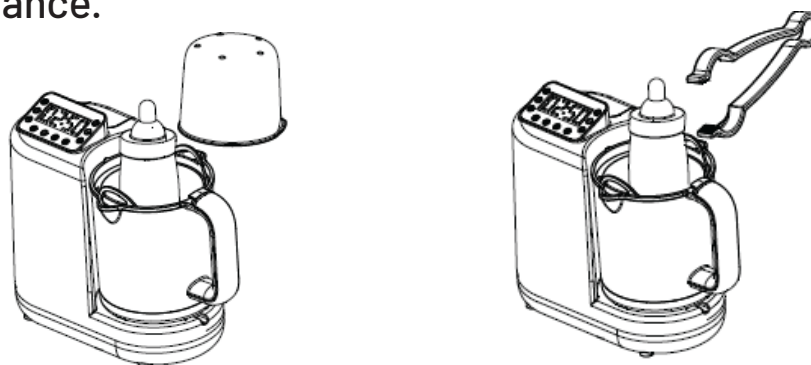

## D.1 Suggested Warming Time Table

-		100ml in the Water Tank (25°C)	
		Warning/Reheating Time (min)	Defrosting time (min)
		Ambient Temperature (22°C)	Fridge Temperature (10°C)
PP Bottle	30ml	5	6
	60ml	5	6
	90ml	6	6
	120ml	6	7
	150ml	7	7
	180ml	7	8
	210ml	7	8
	240ml	7	8
	270ml	7	8
	300ml	8	9
Glass Bottle	100ml	5	5
	130ml	5	6
	200ml	6	6
	250ml	6	7

**Note:** The final temperature of the bottle contents may vary due to room temperature differences, as well as variations in bottle sizes and shapes. If the contents are too cool, consider increasing the warming time on the next use. Conversely, if the contents are too hot, reduce the warming time accordingly.

## E. Keep Warm Function


1. After blending and steaming, transfer the food into the steam basket or blender jug, then secure the lid.
2. Fill the tank with 150ml of water.
3. Start the keep-warm function. The default setting is 60 minutes, but you can adjust the duration from 1 to 8 hours.
4. The appliance will begin operating 5 seconds after the setting is completed, provided there is no further user interaction.
5. You can feed your baby at any time during the keep-warm period.
6. Wash the blender jug with water after use.

## Descaling the Water Tank

1. Deposits may accumulate at the bottom of the water tank with prolonged use. To ensure optimal functionality of the steaming feature, it is recommended to clean the tank regularly, about once every one to four weeks.
2. Always unplug the appliance before starting the cleaning process.
3. Prepare the Solution:  
Option 1: Mix 15g of citric acid with 150ml of water.  
Option 2: Mix 100ml of white vinegar with 50ml of water.
4. Pour the chosen solution into the water tank and secure the cap.
5. Place the blender jug on the appliance.
6. Start the descaling function, which can be set to run from 4 to 8 hours. Once complete, unplug the appliance.
7. Pour out all the descaling solution from the tank.
8. Thoroughly rinse the tank and blender jug several times with clean water.
9. Pour out all the rinse water from the tank.
10. Before cooking, fill the tank with 100-200ml of water and run the steam function with the blender jug empty for 20 minutes to eliminate any residual odors.
11. Ensure the water tank is completely dry after cleaning.

## Power Cord Storage

Power cord can stored at the bottom of appliance.

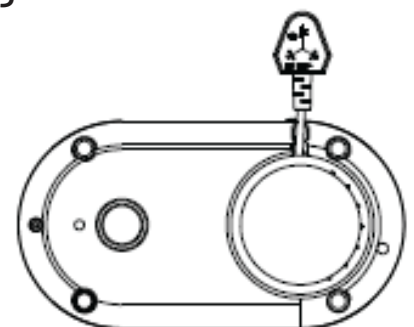



## Cleaning and Maintenance

1. To maintain optimal performance, clean the appliance after each use with the following guidelines.
2. Do not immerse the motor unit in water.
3. Avoid using abrasive cleaning products.
4. Never use bleach or chemical sterilizing solutions or tablets on the appliance.
5. Unplug the appliance.
6. Remove the blender jug from the main unit.
7. Detach the jug lid from the blender jug.
8. Carefully disassemble the blade and other parts.
9. Immediately wash the blade assembly and other removable parts under running water.
10. Ensure all parts are thoroughly dried before reassembly to prevent mold or odors.



11. After each use, clean all parts that come into contact with food. Use hot water with detergent.
- Note:** All parts except the main body can be cleaned in the dishwasher.
12. If necessary, wipe the main body with a dry cloth to remove any residue or fingerprints.
  13. Regularly inspect the water tank and clean it if you find any food residue.
  14. Check the steam outlet regularly and clean it if there is any food buildup.
  15. Always ensure the water tank is dry after cleaning to prevent mold and odor development.

## Steam Outlet Cleaning

The steam outlet should be cleaned regularly to remove any food particles. Follow these steps for effective cleaning:

1. Always unplug the appliance before starting any cleaning procedure.
2. Add citric acid (or vinegar) and water into the water tank.
3. Cover the water tank and tighten the cap securely.
4. Turn the appliance upside down to position the steam outlet downward, then pour the citric acid (vinegar) and water solution through the outlet to flush out any food particles.
5. After cleaning, empty the water tank and ensure it is completely dry to prevent any mold or odors.

## Specifications

Product Name	Porodo 7 In 1 Baby Food Processor
SKU	PD-LFST018
Rated Voltage	220-240V
Rated Frequency	50-60Hz
Power Plug	UK 3-Pin Plug
Rated Power	700W (Heating Function), 120W (Blender Function)
Water Tank Capacity	280 ml
Blending Jug Capacity	900 ml
Product Net Weight	2.1KG
Product Dimension	288×132×212mm

## **Warranty**

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
**porodo.net/warranty**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:  
**info@porodo.net**

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**