

PORODO



Porodo Kids

Megaphone with 6 Voice-Change Effects

SKU: PD-LFST097




Table of Contents

Product Overview	2
Specifications	2
Operational Instructions	3
Troubleshooting	4
Disposal	5
Warranty	5
Contact Us	5

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Product Overview

- 1. Power Bluetooth
- 2. Siren
- 3. Record
- 4. Playback
- 5. Decrease Volume
- 6. Increase Volume
- 7. Child
- 8. Alien
- 9. Ghost
- 10. Robot
- 11. Spooky
- 12. Monster

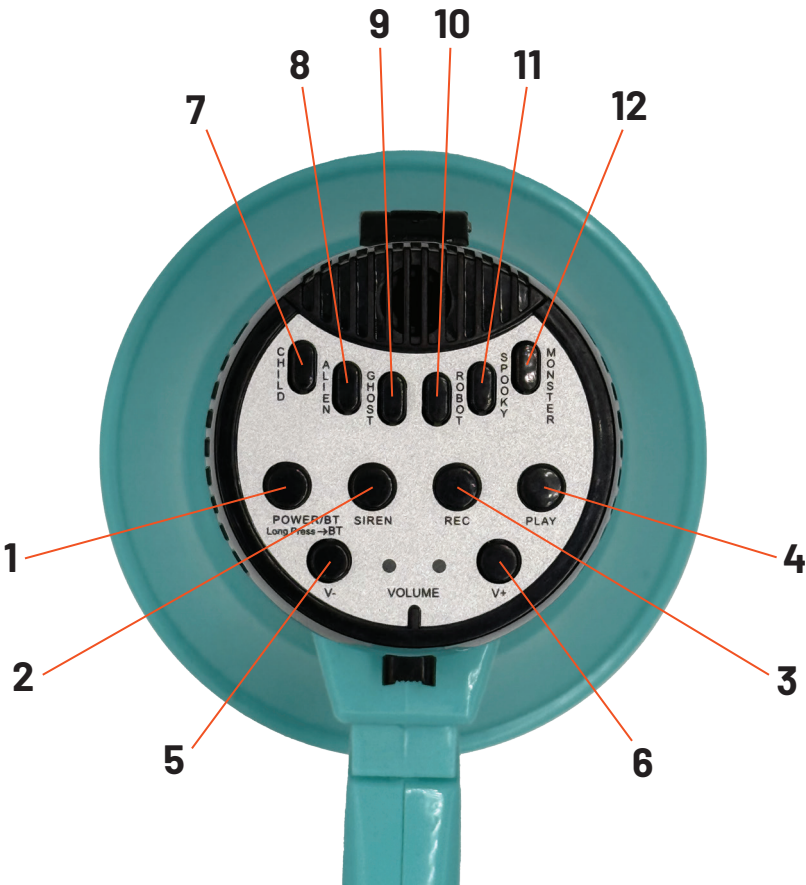

Specifications

Battery Type	x4 AA Batteries (Not Included)
Battery Life	Up to 3H of continuous use
Effective Range	Up to 400 Meters Outdoor
Power Output	20W
Horn Dimension	Ø137mm, Length 223mm
Weight	480g

Operational Instructions

A. Installing the Battery

1. Press the battery unlock button to release the top cover.
2. Insert four AA batteries, ensuring proper polarity alignment (+/-) as indicated in the battery compartment.
3. Securely close the top cover and fasten the latch to ensure proper operation.



B. Sound Amplification Mode

1. To activate the sound amplification mode, briefly press button 1.
2. Position the horn opening towards the audience for optimal sound projection.
3. Hold the microphone close to your lips and speak clearly for effective voice transmission.
4. Adjust the volume as needed using button 5 to decrease or button 6 to increase the output level.

C. Bluetooth Mode

1. To enable Bluetooth mode, press and hold button 1 until the device enters pairing mode.
2. Connect your smartphone or other Bluetooth-enabled devices to the megaphone for seamless audio streaming.

D. Siren and Whistle Sounds

1. To play the siren sound, briefly press button 2.
2. To play the whistle sound, press and hold button 2 for an extended duration.

E. Recording and Playback

1. To record a message, press button 3 and speak directly into the microphone.
2. Press button 3 again to stop the recording.
3. To play the recorded message, press button 4.

F. Voice Changer Mode

1. To activate the voice changer mode, press button 1.
2. Use buttons 7 to 12 to browse and select different sound effects.
3. Speak into the microphone to hear the transformed voice with the selected effect.

G. Important Usage Guidelines

1. Adjust the volume level appropriately to prevent distortion or audio feedback. Higher volume levels may cause howling or unwanted noise.
2. For optimal amplification, ensure the microphone is positioned close to the sound source.

Note: If the megaphone becomes unresponsive or the sound output weakens the batteries may be depleted. Follow the battery replacement steps outlined above.

Troubleshooting

If the megaphone fails to operate, follow these steps to troubleshoot the issue:

1. Remove the batteries and verify that the positive (+) and negative (-) terminals are correctly aligned as indicated in the battery compartment.
2. If the terminals are correctly positioned, reinsert the batteries and ensure

they are firmly pressed into place.

3. Confirm that the batteries are making proper contact with the terminals to establish a secure connection.

4. If the issue persists, consider replacing the batteries with a new set and retrying the operation.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**