



GREEN LION



Green Lion
SENSITIVE AREA
TRIMMER 2

SKU: GNSNTVARTM2BK

Model No: GL-TM42

Table of Contents

Product Overview	2
Specifications	2
Safety Precautions	3
Product Sections	4
Setup Guide	5
Cleaning and Maintenance	7
Disposal	8
Warranty	9
Contact Us	9

Product Overview

The Green Lion Sensitive Area Trimmer 2 offers a high-performance grooming experience with a 6100 RPM motor and two adjustable speed levels for personalized use. It features IPX7 waterproofing, allowing for safe use in wet conditions, and comes equipped with a spot light for precise trimming. The trimmer includes a digital display for easy tracking of battery status and runtime, offering up to 90 minutes of use per charge. It uses a ceramic and stainless steel blade for smooth, skin-safe trimming, and includes two guide combs for different lengths. Additionally, the trimmer is designed to be both corded and cordless, with Type-C charging for convenience.

Specifications

Material	ABS + Stainless Steel
Blade	Ceramic + Stainless Steel
Motor	DC 280 Brushed
Power	3W
Speed Levels	2
RPM Range	5500- 6100
Battery	600mAh
Waterproof	IPX7
Charging Port	Type-C
Charging Time	90 min
Working Time	1 Hr
Product Weight	134 g

Product Dimensions	39*38.5*146 mm
Limit Combs Size	4-2 mm, 7-5 mm
Model No	GL-TM42

Safety Precautions

Please read these instructions carefully before use.

Keep these instructions for future reference.

Ensure that the appliance is suitable for the intended environment, such as kitchens, offices, and other residential or similar spaces.

Always turn off the appliance when not in use and unplug it from the socket.

Never leave the appliance unattended during use.

The appliance should be cleaned according to the manufacturer's guidelines.

Ensure the appliance is kept dry and stored in a safe, cool area.

Never use this appliance near water, such as in wet basins, bathtubs, or showers.

Always unplug the appliance after use and before cleaning.

FOR USE IN SAFE ENVIRONMENTS

This appliance is designed for indoor use only, in dry environments, and must not be exposed to extreme humidity or water.

Never use the appliance outdoors unless specifically stated by the manufacturer.

CHILD SAFETY

Do not allow children to play with the appliance. Always keep it out of the reach of small children.

If the appliance has been damaged, do not use it, and have it checked or replaced by a qualified professional.

Keep the appliance away from heat sources and flames.

RISK OF SUFFOCATION

Never block the appliance's air intake or exhaust vents to avoid overheating and potential hazards.

Keep the appliance away from hot surfaces and objects that could cause burns or fire.

ADDITIONAL SAFETY PRECAUTIONS

Before using, ensure that all parts are securely connected and that there are no signs of damage.

Do not use the appliance if it shows any visible signs of damage or leaks.

Only use the appliance as intended and ensure it's kept in optimal condition.

Always place the appliance on a stable, flat surface to avoid tipping or accidents.


ELECTRICAL SAFETY

Always ensure the plug is inserted into a grounded socket and the power supply matches the appliance's requirements.

In case of any malfunction, do not attempt to repair the appliance yourself. Seek professional help.

Product Sections

1. Cutting unit
2. LED illuminator
3. On/Off switch with 2 speeds
4. LED display
5. Charging base
6. Small guide comb
7. Big guide comb
8. Cleaning brush
9. USB charging cable

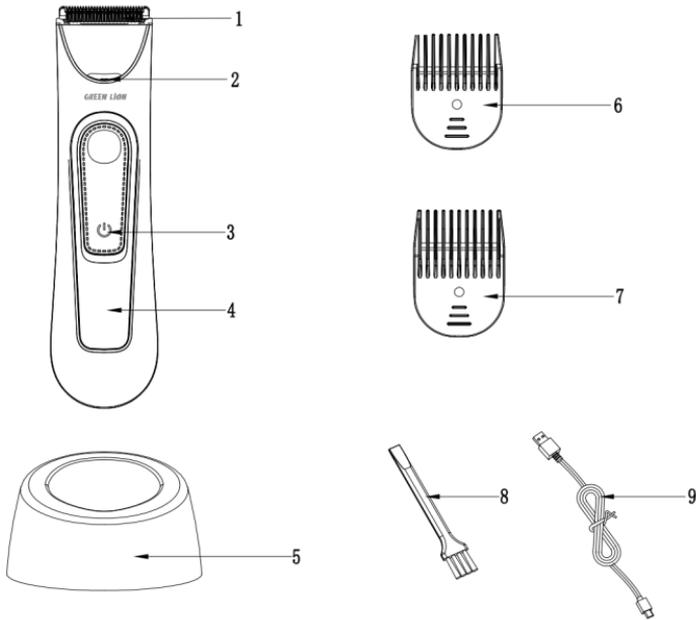

Setup Guide

1. First Use

Before using the unit for the first time, carefully remove all accessories, paying special attention to the sharp components. Clean with soap and water, ensuring all accessories are rinsed and dried thoroughly. Wipe down the outside and inside of the machine cabinet with a damp cloth, then dry completely.

2. Use

Fully unroll the power cord.

Verify that the voltage in the country you are in matches the voltage specified for the apparatus.

Connect the apparatus to a properly grounded socket (ensure grounding if the unit is Class I).

Always disconnect the power source cable before performing cleaning, maintenance, or handling of accessories.

Never modify the appliance in any way.

3. Description of LED Indicator

Speed I: LED indicator in steady blue color

Speed II: LED indicator in steady purple color

Low battery: LED indicator flashing red color

Charging: LED indicator in steady red color

Charging finished: LED indicator flashing blue color

Travel lock: When the appliance is off, press the on/off switch for 5-3 seconds. The travel lock function will be activated, and the LED indicator will flash blue 3 times. The travel lock function can be canceled by pressing the switch again for 5-3 seconds. The appliance will then turn on.

4. Charging the Battery

Connect the adaptor to the unit.

Ensure the appliance is switched off.

Plug the adapter into the power supply.

The pilot light will glow red when charging.

It will take approximately 1.5 hours to fully charge.

5. Operation

Before use, apply 2 or 3 drops of oil on the cutting unit.

Use the ON/OFF switch to turn the appliance on or off.

The appliance can be used for about 60 minutes if the battery is fully charged.

The appliance can also be used directly with the adapter if there is no power from the battery.

6. Using the Comb Attachment

Before loading or unloading the comb attachment, ensure the power switch is in the off position.

Attach the comb to the main unit using it as the reference point.

Push the end of the comb to adjust the cutting length (push up for long cuts and down for shorter cuts).

Note: There are 3 positions to control the cutting length:

Small guide comb: 2-4mm

Big guide comb: 5-7mm

Cleaning and Maintenance

Before cleaning: Always switch off the appliance, disconnect it, and let it cool.

Clean the exterior with a sponge or slightly wet linen.

Remove the removable parts (e.g., plates, bowls, forks, spatulas) and wash them in hot water with soft detergent or place them in the dishwasher.

Never submerge the appliance in water or any other liquid.

Avoid using abrasive cleaners, grit, metal brushes, or sharp objects.

Steps for cleaning:

Guide Comb Cleaning:

Remove the guide comb.

Clean the hair between the top and lower blade with a brush.

Washing: Wash the guide comb or cutting unit with running water if necessary. Dry the guide comb or cutting unit thoroughly.

Oiling the Cutting Unit: Oil the cutting unit regularly to maintain its performance and prolong its lifespan.

Add 3-2 drops of oil on the cutting unit.

Replacing the Cutting Blades: Position the blades with the hook in the housing slot and press until they click into place.

Storage

Ensure the unit is completely cool and dry before storage.

Avoid wrapping the cord around the appliance to prevent damage.

Store in a cool, dry place, out of reach of children.



Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.greenlion.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.greenlion.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: <https://www.greenlion.net/>

Sales: sales@greenlion.net

Service Support: Support@greenlion.net

Telegram: [@greenlion_global](https://t.me/greenlion_global)

Instagram: [@greenlion_global](https://www.instagram.com/greenlion_global)