



Green Lion

SMART PET FEEDER WITH STAINLESS STEEL BOWL

SKU: GNSMTPETFRWH
Model No: GL-PF3L

Table of Contents

Product Overview	2
Specifications	2
Safety Precautions	3
Packing List	4
Product Design	5
Mounting Sequence	6
Key Buttons Description	8
Low Power Mode	9
Care Instructions	9
Necessary Instructions	9
APP Specific Operations	12
Troubleshooting	13
Maintenance and Cleaning	14
Disposal	15
Warranty	16
Contact Us	16

Product Overview

The product is a smart pet feeder by Green Lion, offering remote feeding and control via the "Smart Life" app. It features real-time alerts, video recording, dual power supply, and a stainless steel bowl. The device also has flexible portion control, an HD camera for monitoring, and a personalized voice call function. It includes additional features like an anti-sneak lock, double rotor system for efficient dispensing, moisture guard storage, and a 45-degree slope design to ensure smooth feeding. Ideal for pet owners seeking convenience and advanced control for feeding their pets remotely.

Specifications

Model No	GL-PF3L
Material	ABS
Food Tank Capacity	3L
Applicable Food	Dry Food
Kibble Size	Ø3-12 mm
Meal Scheduling	1-10 Meals/day
Servings	1-12 per Meal
Portion	10g ± 2g per Serving
Meal Call Recording	Up to 10 Sec
Video Resolution	720p
WiFi	2.4GHz
Main Power	DC 5V Adapter
Adapter Input	AC240-110V

Cable Length	1.5 Meters
Backup Power	3*D-cell Alkaline Batteries
Product Weight	1.26 kg
Product Dimensions	185*185*294 mm

Safety Precautions

1. Children should only use the product under adult supervision.
2. The feeder is not suitable for those who cannot reach the food tray or have physical disabilities.
3. Do not submerge the foundation in water, as it may damage electronic components like the control panel.
4. Avoid placing foreign objects in the pet feeder.
5. Do not place wet food or spoiled food in the feeder.
6. The feeder should not be disassembled or repaired by yourself.
7. If the equipment malfunctions or parts are damaged, contact your seller immediately for assistance.
8. Be sure to unplug the product when not in use or before cleaning it.
9. If the feeder's power supply malfunctions, turn off the power at the outlet and avoid attempting to unplug it.

Notice:

Do not allow pets to chew or swallow any accessories. If you are concerned about potential damage to the power cord, use a protective cord cover from a hardware store.

Avoid placing the feeder in direct sunlight or in areas where the ambient temperature may vary significantly.

Use only rechargeable batteries. Always ensure the battery is properly installed before use.

Avoid lifting the feeder by the cord or food bowl. Always handle with both hands.

For proper food storage, place food in an airtight container to prevent spoilage.


If transporting the feeder, keep it in a cool, dry area and avoid exposing it to extreme temperatures.

Always follow packaging instructions for safe operation and handling.

Packing List

After opening the product package, please make sure the pet feeder is intact. Please check the list to make sure the accessories are complete.

A. Hosts

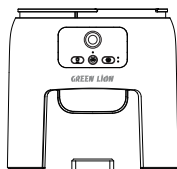

B. Accessories



1. Food Tank Lid



2. Food Tank



3. Bottom of grain drum




4. Food Bowl




5. Power Adapter

A. Front view

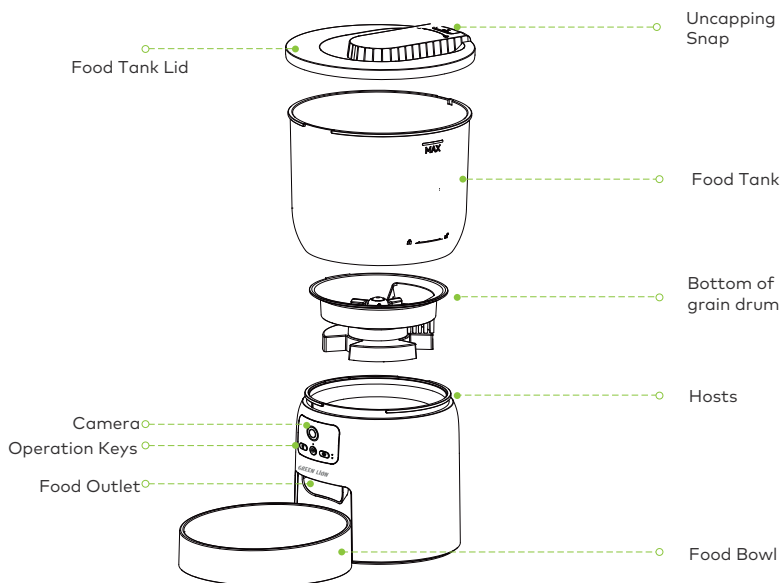


B. Bottom view

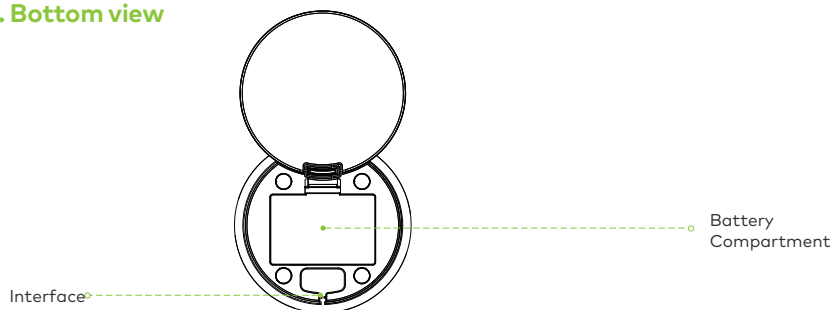


Mounting Sequence

1. Installation of Grain Drum Bottoms

Attach the bottom of the grain drum into the base of the main unit. Ensure that it is correctly aligned as shown in the illustration. Refer to the "front" and "back" markings for precise placement.

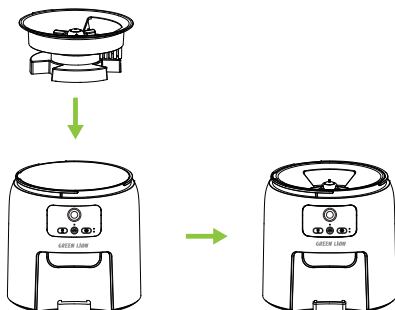


Put the bucket into the corresponding buckle track according to the illustration, align with the mark Δ , and rotate clockwise from ① to ② until you hear a click and tighten it, and then make sure the fastening is not loosened after the operation is completed.

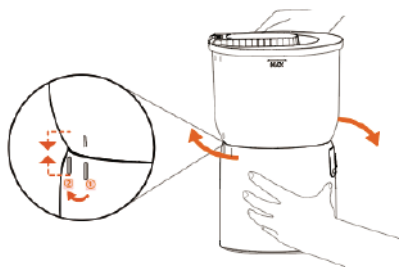


2. Installation of Grain Drums

Align the grain drum with the small (left) and large (right) alignment ports. Position it into the corresponding serial number slot in the base of the unit.

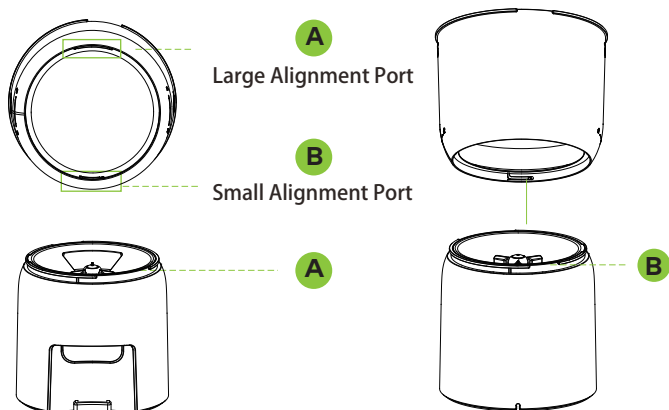


3. Installation of the Food Tank Lid

Place the food tank lid by pushing it down over the food tank. Press the lid firmly until it clicks into place, ensuring that the lid is securely fastened before operation.

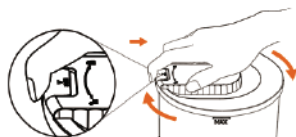

4. Attaching the Feeder Base

Position the feeder base on a stable, level surface. Secure it firmly by attaching the food bowl to the base.

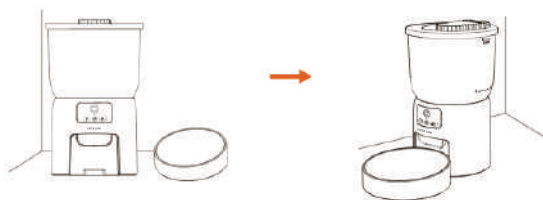

Key Buttons Description



1. Recording Button:

Action: Long press the button until the "air" indicator light illuminates, signaling the beginning of a recording session. The recording should not exceed 10 seconds. Upon releasing the button, the "air" light will blink to confirm the recording has been saved.

2. Feeding Button:

Action: Press this button to dispense food. The feeder will release food as long as the button is held down. To stop dispensing, simply release the button.

3. Reset Button:

Action: To reset, press and hold the reset button  until you hear a "drop" sound, which will take about 3 seconds. The reset will restore the unit to factory settings, including configuration and feeding plans.

Important note

Buttons are automatically locked after 30 seconds. First, unlock the key, then use it.

Indicator Light Color	Indicator Light Color	Status Description
White	Flashing	In the process of network distribution
	Ever-bright	Network connection successful
red	Fast flashing	Lock key / Unlock (flashes 2 times) power on (flashes for about 20 seconds, then turns off)
	Slow flashing	Low power / motor stalled
	Ever-bright	battery powered

Low Power Mode

1. Battery Power Source:

When not connected to a power source, the device operates on battery power by default. If the device is unplugged, make sure to check if the batteries are installed and functioning properly.

2. Feeding with Low Power Mode:

The feeder continues to work in the low-power mode for up to 36 hours or until the battery is depleted. While in this mode, the feeder will still function but with limited capacity. If full operation is necessary, it's advised to reconnect to a power source.

3. App Connection (Optional):

If you wish to use the mobile app, connect the feeder to a power source to ensure full functionality and synchronization with the app.

Care Instructions

Regular Maintenance:

Regularly clean and check the feeder to maintain optimal performance. Make sure the parts are free from dirt and residue.

Cleaning the Food Bowl:

After use, remove any leftover food in the feeding tray. Wash with warm water and mild soap to maintain hygiene. Do not submerge in water while plugged in.

Avoid Dishwasher Cleaning:

The unit should never be placed in the dishwasher as it may cause permanent damage to its internal components.

Necessary Instructions

1. Installation

Assemble the unit following the steps in the order of installation.

2. Connect the Power Supply

Plug the 5V/1A power adapter into an outlet and connect it to the device. After plugging in, toggle the boat-shaped switch located at the bottom of the device to activate it. The LED light will turn on, indicating that the feeder is powered up.

Open the battery compartment at the bottom of the feeder and insert 3 Size D batteries (optional). This ensures the unit is powered in case of any power failure.

Important Notes:

Batteries are not included.

Before powering on, ensure all parts are clean and correctly assembled to avoid any issues.

3. Put Pet Food in the Food Tank

Press and hold the button  and rotate the top cover counterclockwise to open it.


Fill the food tank with dry pet food.

Once filled, align the top cover with the food tank and rotate it clockwise to secure it in place.

Important Notes:

Do not use canned, wet, or pet food that is overly moist.

The recommended pet food size is between 10-3 mm in diameter.

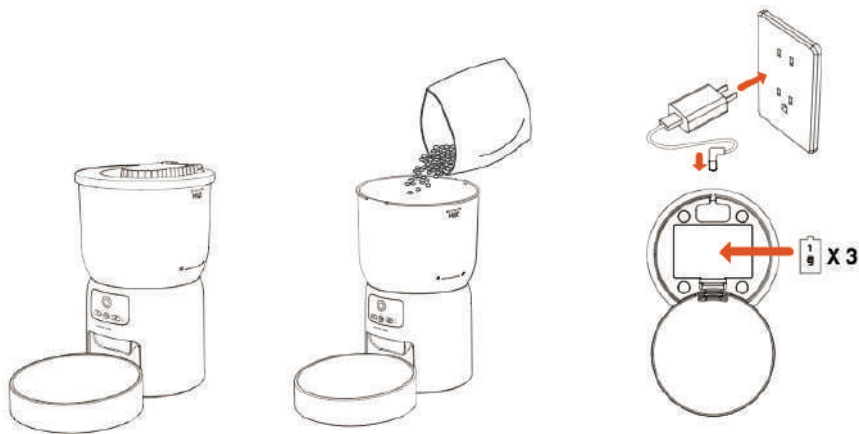

4. Recording

To record a message, press and hold the recording button for approximately 1 second until you hear a "di" sound. Then, begin speaking your message. Release the button to end the recording when you hear the "didi" sound. The recording time can last up to 10 seconds.

The recording will only play when the button is pressed and there is a recorded message available.

Important Notes:

Press the button to play the recording.

When it's time to feed your pet, remove the food and press the recording button again to replay the message.



5. Lock/Unlock

To lock the unit, press and hold the key button for 30 seconds until you hear a "di" sound. To unlock, press and hold the button  for 3 seconds until it unlocks, accompanied by two "di" sounds.

Important Notes:

The unit cannot be operated in the locked state, so make sure to unlock it before use.

The locked state does not affect the operation of the app.



6. Feed

To feed, press the button briefly to dispense one portion of food.

Important Notes:

Please unlock the device before feeding.

The feeding schedule will remain unaffected.



7. Reset

In the unlocked state, press and hold the reset button for 6 seconds until a "di" sound is heard. This restores the device to factory settings, including network information, feeding schedule, and feeding records.


The network can be reconfigured after resetting.




APP Specific Operations




1. Download the App to register an exclusive account.

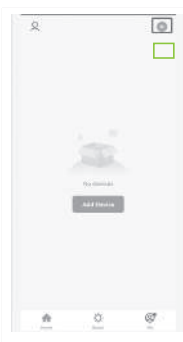


2. Enter the main interface of the App, add devices.

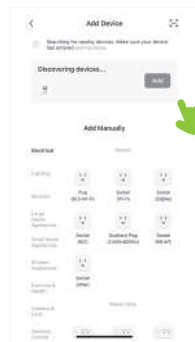


3. First, turn on Bluetooth on your phone and allow permissions. After entering the interface, wait for the device to be automatically discovered and click Add.

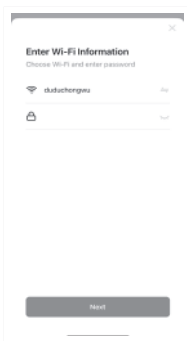

4. Enter the Wi-Fi password (the name cannot use Chinese, and the password cannot use special symbols).

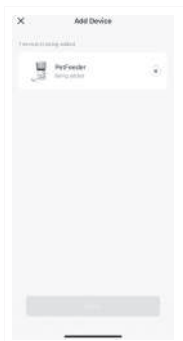


5. Wait for the device to connect to the network.

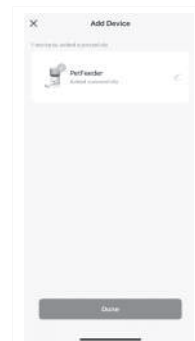

6. The device is added successfully, click Finish.




7. Real-time viewing, high-definition quality

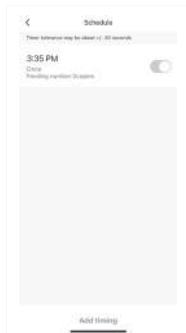


8. Click on the home page to schedule feeding and add a schedule.




9. You can set the time and number of servings according to the pet's eating pattern, set to every day can choose Monday to Sunday, point save!

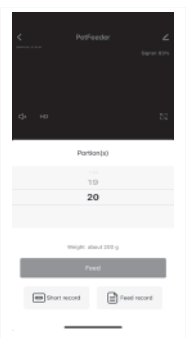

10. Point home page feeding, you can customize the number of portions of food, the maximum number of portions is 20.

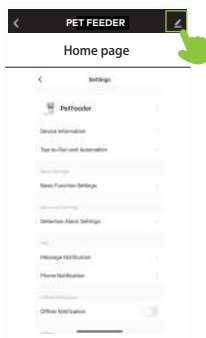

11. Tap Settings in the upper right corner of the home page to enter the settings interface.

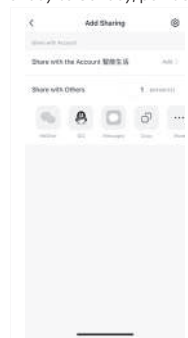

12. On the Settings screen, tap Share Device to synchronize your device with your family or friends.

Troubleshooting

Programs for Problem Solving

Q: I press any button without a response

A: The device will automatically lock after 30 seconds of inactivity. To unlock it, please press and hold the button  for 3 seconds.

Q: The app video can't be displayed properly

A: Ensure the environment where the device is located has a strong network connection.

Q: The app can't connect to the feeder

A: Please check that the Wi-Fi name and password are not in Chinese characters or longer than 12 digits, and verify that the Wi-Fi type is 2.4G. Restart your phone, close any unnecessary background apps that open automatically, and try reconnecting.

Q: The feeder does not dispense food properly or does not dispense food at all

A: Check for blockages in the food bowl or the grain passage. If blockages are found, clear the path and check the grain outlet time.

If the device uses a battery, verify that it is charged.

Q: Feeder display offline

A: Ensure the feeder is within 10 meters of your home router for optimal signal strength. Wi-Fi signals weaken with distance and may result in unstable connections.

Q: No response to power on

A: Confirm that the device is plugged in correctly. If the issue persists, contact your dealer or customer service.

Maintenance and Cleaning

1. Remove the top cover and empty the grain drum to ensure it is free of any remaining grain.
(Make sure the grain is empty)



2. Grasp the grain barrel by hand and rotate it counterclockwise to remove the barrel.



3. Remove the bottom of the grain barrel.
(Check for any residue and clean thoroughly)



4. Empty the food tray and remove the tray for cleaning.



5. Rinse with water or use food-grade detergent. Allow the components to air dry.



6. Clean the base of the main unit using a damp cloth. Do not rinse the unit with water.



Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://www.greenlion.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.greenlion.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: **<https://www.greenlion.net/>**

Sales: **sales@greenlion.net**

Service Support: **Support@greenlion.net**

Telegram: **[@greenlion_global](https://www.telegram.com)**

Instagram: **[@greenlion_global](https://www.instagram.com)**