

PORODO



Porodo

ACTIVEX SMART FITNESS BAND & EARBUDS

SKU: PD2IN1SB62BK



Table of Contents

Preface	2
Package Contents	2
Safety Precautions	2
Usage and Care Instructions	5
Specifications	7
Features	8
Maintenance Tips	8
Frequently Asked Questions	9
Troubleshooting	11
Disposal	12
Warranty	13
Contact Us	13

Preface

Thank you for choosing the ACTIVEX SMART FITNESS BAND & EARBUDS, a two-in-one fitness and audio companion designed to track everyday activity while keeping you connected to your music and calls.



Package Contents

1. ACTIVEX SMART FITNESS BAND & EARBUDS × 1
2. Charging case × 1
3. Pogo-pin charger × 1

Safety Precautions

Warning:

1. Do not listen at high volume for long periods — prolonged exposure to loud sound can damage your hearing.
2. Do not use the earbuds while driving, cycling, or whenever reduced awareness of surrounding sounds could be dangerous.

3. Keep the product and its small parts away from young children – choking hazard.
4. Do not disassemble, crush, puncture, burn, or short-circuit the product or its batteries.
5. Stop using the product if it becomes unusually hot, swollen, damaged, leaks, or emits an unusual odor.
6. Keep the product and charging contacts dry during charging, and never charge it while wet.
7. Use a compatible charger matching the rated input; an incorrect electrical supply may cause fire or product damage.
8. Keep the product away from open flames and other heat sources.
9. Avoid operating, charging, or storing the fitness band, earbuds, or charging case in extreme heat or cold.
10. Do not wear or use the fitness band or earbuds while charging.
11. If charging stops or the product switches off because of abnormal temperature or charging conditions, disconnect it, allow it to cool, and check the charger and connections before attempting to use or charge it again.
12. Do not charge or use the product with damaged cables, connectors, chargers, charging accessories, or housings; arrange replacement or service as appropriate.
13. Do not modify, open, or attempt to repair the fitness band, earbuds, charging case, or charging accessories.
14. Operate, charge, and store the fitness band, earbuds, and charging case only within their applicable specified temperature ranges.
15. Built-in protection may stop charging or operation in the event of overcurrent, overvoltage, short circuit, or overheating; disconnect the product, allow it to cool, check the charger and connections, and retry only when the condition has been corrected.
16. Charge the fitness band through its pogo-pin charger and the charging case through its USB-C port using a 5 V USB power source.

Attention:

1. Stop using the product if you experience skin irritation or discomfort from prolonged contact.
2. Clean and dry the product, earbuds, and skin-contact surfaces regularly.

3. Do not immerse the product beyond its stated water-resistance rating, and ensure covers and seals are secure before water exposure.
4. Keep the charging contacts clean and free of metal objects, dirt, and moisture.
5. Store the product in a cool, dry place away from direct sunlight.
6. Handle the glass and metal surfaces carefully to avoid scratches, cracks, or impact damage.
7. For extended storage, keep the product in a cool, dry place and recharge it at least every three months.
8. Only the fitness band is rated IP68. Do not expose the earbuds or charging case to water unless they have a verified stated water-resistance rating.



Usage and Care Instructions

1. Charge Before First Use

Connect the fitness band to its pogo-pin charger.

Connect the earbud charging case to a 5 V USB power source using its USB-C charging port.

Place both earbuds correctly in the charging case and confirm that charging begins.

Allow the fitness band, earbuds, and charging case to charge before initial setup.

Do not wear or use the fitness band or earbuds while charging.

2. Set Up the Fitness Band

Download the Porodo Fit app by scanning the QR code provided on the packaging.

Enable Bluetooth on your mobile device and open the app.

Follow the in-app instructions to add the fitness band.

Keep the band close to the mobile device until setup and synchronization are complete.

3. Wear and Use the Fitness Band

Place the band around your wrist with the sensor resting against clean, dry skin.

Adjust the strap so it is secure without being uncomfortably tight.

Use the band controls to view available activity and health-tracking functions.

Open the companion app to review synchronized activity information.

4. Pair the Earbuds

Charge the earbuds and remove them from the charging case.

Enable Bluetooth on the mobile device.

Open the device's Bluetooth menu and select the earbuds from the list of available devices.

Confirm the connection, then begin audio playback on the connected device.

5. Use the Earbud Touch Controls

Wear each earbud securely using its ear hook.

Use the touch-control area to manage supported audio and call functions.

Use the connected device to adjust settings when required.

Return the earbuds to the charging case after use.

6. Use the Voice Assistant

Pair the earbuds with a compatible mobile device.

Use the supported touch command to activate the mobile device's voice assistant.

Speak clearly while the earbuds are connected.

Use the touch control or connected device to end the interaction.

Specifications

Smart Fitness Band

Material	- Zinc Alloy, IML Glass
Flash Memory	- 80KB/1MB (RAM/ROM)
G-Sensor	- SC7A22
Heart Rate Sensor	- HX3918H
Bluetooth Version	- 5.4
Chip Model	- OnMicro OM6626A
Working Time	- 30 Days (Normal Usage), - 40 Days (Standby)
Charging Time	- 2h
Charging Type	- Pogo-Pin Charger
Water Resistance	- IP68
Band Width	- 20mm
Compatibility	- Android 8.0+ / iOS 12+ - / Porodo Fit.
Product Size	- 42 x 23.8 x 9mm
Product Weight	- 25g

Earbuds

Input	- 5V
Battery Capacity	- 400mAh (Case), 33mAh (Earbuds)
Working Time	- 3.5-4 Hours
Charging Time	- 1.5 Hours
Standby Time	- 3 Months
Transmission Range	- 10m
Bluetooth Version	- V6.0
Charging Port	- USB-C
Product Weight	- 59g
Product Size	- 72 x 62 x 32mm (Case), 47.5 x 31.6 x 18.5mm (Earbud)
Model Number	- PD2IN1SB62

Features

1. Two-in-one smart fitness band and wireless earbuds
2. Comprehensive health tracking
3. Sports and activity tracking
4. IP68 water-resistant fitness band
5. Up to 30 days of fitness band working time
6. Up to 4 hours of earbud playtime
7. Hi-Fi sound quality
8. Touch controls
9. Voice assistant support
10. Ear hooks for a secure fit during activity

Maintenance Tips

1. Routine Care

Wipe the fitness band, earbuds, and charging case with a soft, dry cloth after use.

Keep the charging contacts clean and dry to maintain reliable charging.

Remove moisture and perspiration from the band before charging it.

Do not use abrasive cleaners, solvents, or sharp objects on the product.

Store the earbuds in their charging case when they are not in use.

Keep the charging case and charging accessories away from water and excessive moisture.

During extended storage, keep the product in a cool, dry place and recharge it at least every three months.

Frequently Asked Questions

1. How do I connect the fitness band to my mobile device?

Install the Porodo Fit app, enable Bluetooth, and follow the in-app instructions to add and synchronize the fitness band.

2. How do I pair the earbuds?

Remove the charged earbuds from their case, open the mobile device's Bluetooth settings, and select the earbuds from the list of available devices.

3. Can I wear the fitness band while exercising?

Yes. The band is designed for fitness use and has an IP68 water-resistance rating; clean and dry it after exposure to perspiration or moisture.

4. How should the fitness band be worn for tracking?

Wear it securely against clean, dry skin without overtightening the strap.

5. How do I charge the two parts of the product?

Charge the fitness band with its pogo-pin charger, and charge the earbuds through their charging case using the USB-C charging port.

6. How should I store the earbuds?

Clean and dry the earbuds, then place them correctly in the charging case when they are not in use.

Troubleshooting

Problem	Likely Cause	Solution
ACTIVEX SMART FITNESS BAND & EARBUDS does not power on	Battery is depleted or the charging contacts are not aligned	Charge the affected component and clean and realign its charging contacts.
Fitness band does not charge	Pogo-pin charger is misaligned or the contacts are dirty	Disconnect the charger, clean the contacts with a dry cloth and reconnect it securely.
Earbuds do not charge in the case	Earbuds are not seated correctly or the case battery is depleted	Reseat both earbuds and recharge the charging case through its USB-C port.
Fitness band does not connect to the app	Bluetooth is disabled, the band is out of range or setup is incomplete	Enable Bluetooth, keep the devices close together and repeat the in-app setup process.
Earbuds do not appear in the Bluetooth list	Earbuds are not ready to pair or remain connected to another device	Return them to the case, remove them again and retry pairing after disconnecting other devices.
Bluetooth connection drops	The connected device is too far away or the signal is obstructed	Move within the 10 m transmission range and reduce obstructions or wireless interference.
Audio plays from only one earbud	One earbud is discharged or the earbuds have not synchronized correctly	Charge both earbuds, return them to the case and reconnect them to the mobile device.

Problem	Likely Cause	Solution
Sound is weak or unclear	Earbuds are positioned incorrectly or their sound openings are obstructed	Adjust the fit and gently clean the earbuds with a soft, dry cloth.
Touch controls do not respond	The touch area is wet, dirty or being pressed incorrectly	Dry and clean the touch area, then retry with a deliberate touch.
Fitness data does not synchronize	The app connection is inactive or the devices are too far apart	Open the companion app, enable Bluetooth and keep the band close to the mobile device while synchronizing.
Battery operating time is shorter than expected	Frequent use, high activity or repeated wireless connections are consuming more power	Fully recharge the product and reduce unnecessary active functions or connections.
Product becomes unusually warm while charging	The power source or charging connection may be unsuitable	Disconnect charging immediately, allow the product to cool and check the charger and connections before trying again.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our Porodo website or shop come with a 24-month warranty.

When you buy Porodo products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at www.porodo.net/warranty and fill out the form with your information. Don't forget to upload a picture of the product too. After we have checked and accepted your request, we will send you an email to confirm that your product's warranty has been extended.

For more info, please check: www.porodo.net/warranty

Contact Us

Email: **info@porodo.net**

Website: **www.porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**