105x140mm

GREEN LION



Green Lion

PICO
KIDS KARAOKE SPEAKER

SKU: GNPICOKIDSPBG

Model No.: G-PICO


Product information

Material	: ABS	TF Card	: Up to 32 GB
Speaker Battery	: 1500mAh	Charging Port	: USB-C
Mic Battery	: 500mAh	Charging Time	: 3-4 Hrs
Bluetooth	: V5.3	Playtime	: 6 Hrs
Speaker	: 4Ω 5W	Wireless Range	: 10 m
Sensitivity	: 42 dB	Frequency	: 90Hz-18KHz
RGB Lights	: 7 Modes	Product Weight	: 630 g
Vocal Effects	: 4 Types	Speaker Dimensions	: 85*90*118 mm
Input Ports	: USB, AUX, TF Card	Mic Dimensions	: 135*38 mm

Main functions


- High reduction electro-acoustic system
- 3,7Vhigh performance battery
- Sound penetration, wide coverage
- Suner MP3 audio decoding technology
  All digital audio processing, clearvoice qualty,
- high sensitivity

Function introduction

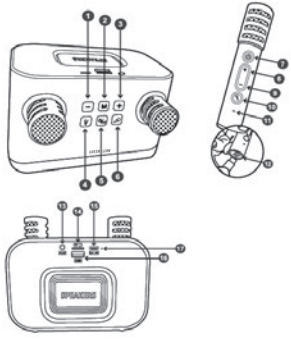

1. Short press once to decrease the volume, long press the previous track.
2. Manually switch playback modes, Bluetooth/FM/TF card/USB drive,etc.
3.Short press once to increasevolume. long press next song
4. Short press to switch LED lighting effects, long press for 2 seconds to turn off LED lighting effects.
5. Long press for three seconds to turn on/off, short press to play/pause.
6. Short press to turn on/off the voiceover.
7. Press and hold the microphone for three seconds to turn it on and off, press and hold once tomutethe microphone.
8.Short press microphone volume up, double-click microphone reverb up.
9. Short press the microphone to decrease volume, double-click the microphone to decrease reverberation.
10. Short press to turn off/turn off the original sound, long press to switch microphone sound effects such as magic sound.
11. Microphone indicator light. blue light flashes when not connected. bluelight stays on when connected successfully, red light lights up when charging, and turns off when fully charged.
12. Microphone Type-C5V charging port.
13.AUX audio inputjack.
14.TF card slot, automatically switches to TF mode when inserting MP3 audio files.
15. Audio Type-C5V charging interface.
16. USB port, automatically switches to USB mode when inserting MP3 audio files.
17.Audio indicator light, blue light flashes when not connected, blue light stays on when connected successfully, red light lights up when charging, and turns off when fully charged

Schematic diagram of charging connection

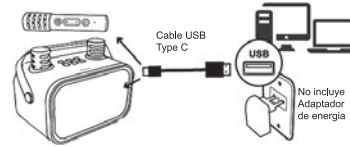

Frequently asked questions

1. If the indicator light does not turn on, p.ease check whether the audio power is sufficient, or to connect the audio to 5V/1A power supply for charging, charging time is about 3 to 4 hours.
2. Therr is no sound in the micronhone. The power supply is not on, the mode is not correct, or the volume is not adjusted. Please adjust the volume of the microphone.
3. If the stereo does not have reverb, the reverb switch may be off, please turn on the revarb switch.
4. If the microphone is noisy, it may be due to amblent noise, signal interference, microphone too close to the speaker, etc., please re-adjust the direction of the microphone.
5. If Bluetooth playback is interrupted, it may be because the Bluetooth is too far away, or there is an obstacle between the phone and the loudspeaker, affecting the signal transmission, please close to the connected phone, avoid the obstacle.
6. If Bluetooth can not be connected, it may be because the distance is too far, there are obstacles, or by other phones connected, please close to the phone to avold obstacles, disconnect the phone.
7. If you can not charge, check whether the charger is normal, audio charging. the charging port of the red light is on.

