



Green Lion

Touch Tone Lite
TWS with Display

SKU: GNTCHTLITWH

Table of Contents

Overview	2
Specifications	2
App Connection Guide	3
Product Overview	4
MFB Instructions	4
Display Function	6
Status Bar Icon Description	7
Special Statement	7
Disposal	8
Warranty	8
Contact Us	8

Overview

Thank you for choosing our smart products. To make the most of your device, we recommend reading this manual thoroughly to familiarize yourself with its features. Our smart headphones use Bluetooth to connect to your mobile phone, providing a range of practical features and services to enhance your experience.



Specifications


Bluetooth Version	V5.3
Bluetooth Range	25 meters
Driver Size	13mm high-excursion driver
Playtime	5 hrs (single charge) 24 hrs (with charging case)
Charging	Type-C
Weight	61g
LCD Size	19×34mm
Input	5V/0.5A
Battery	Earphone 30*2mAh, 300mAh (case)
Waterproof	IPX5
Frequency	20Hzto 20kHz

App Connection Guide

Scan the QR code or search for the "FereFit" app in your app store, download it, and register your account.

- 1. To connect the headphones and charge the device, after opening the charging case, swipe the page to the right to find the device settings.
- 2. Turn on Bluetooth on your phone, open the app, tap "+" to search for the device (model number: E9), and click to connect and confirm pairing.
- **3.** Go to your phone's Bluetooth settings, search for the device, and select the frequency (E9) to connect.



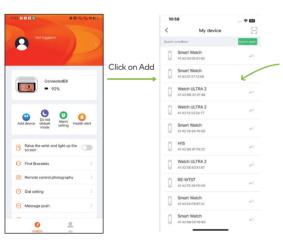


Click to connect the charging case device. After connecting, open the top cover but do not immediately remove the headphones. Wait for three seconds to allow the headphones to automatically connect.



- **4.** The earphones will automatically pair when removed from the storage compartment.
- 5. If the earphones do not pair successfully after being taken out, place

them back into the compartment, close the lid, and press and hold the button for 3 seconds to initiate pairing.

Product Overview

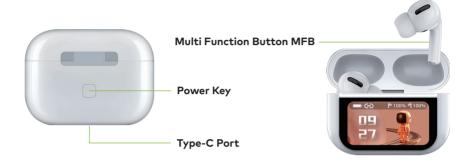

MFB Instructions

	Play/Pause	Press the MFB button to activate the function.
	Next song	Double-click the R-MFB key to perform the action.
	Previous song	Double-click the L-MFB key to trigger the function.
Music	Increase/ Decrease volume	Slide the MFB keys up or down to adjust settings.
	Noise reduction/ Transparency/Off mode	Press and hold the MFB button for 5 seconds to activate the feature.
	Auto Play/Pause	Put on or remove the headphones as needed.
	Power On	The headphone compartment power automatically turns on when opened.
Power	Shutdown	The device will automatically shut down after 1 minute without a Bluetooth connection.
and Pairing	Auto Pairing	Automatic pairing is enabled for outbound connection.
	Manual Pairing	Open the lid, then press and hold the Power button for 3 seconds.

	Power On	Press and hold the Power button for 3 seconds to turn off the device.
Charging Case	Shutdown	Access the Settings General Shutdown interface to turn off the device.
	Auto Pairing	Press the Power button to activate the device.
	Manual Pairing	Press the Power button to turn off the device.



Tap once: Play/pause music, answer or hang up a call.

Tap twice: Go to the previous song.

Press and hold for 5 seconds: Switch between noise reduction, transparency, and off modes.

Slide up and down: Adjust the volume.



Tap once: Play/pause music, answer or hang up a call.

Tap twice: Skip to the next song.

Press and hold for 5 seconds: Activate Siri.

Slide up and down: Adjust the volume.

Display Function

1. Power on for the first time: Press and hold the power button for 3 seconds to turn on the device. Then, select the language, scan the app code, or search for the connected device.





2. Wallpaper selection: Press and hold the wallpaper for 3 seconds to switch wallpapers.



3. Other functions



Status Bar Icon Description





100 %: Headphone out of storage status and battery level display.



100 %: Earphones in storage status and battery level display.



Battery Icon: Earphone compartment battery level display.



Bluetooth Icon: Bluetooth connection status display.

Special Statement

These earbuds and the associated app provide the user with a comprehensive system of health and safety features. However, they are not intended to be used as professional medical equipment, and the relevant test data is for reference only in daily life, not for medical diagnosis.



This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **https://www.greenlion.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

https://www.greenlion.net/warranty



If you have any questions about this Privacy Policy, please contact us at:

Website: https://www.greenlion.net/

Sales: sales@greenlion.net

Service Support: Support@greenlion.net

Telegram: @greenlion_global
Instagram: @greenlion_global